

ivation®

50-Pint Energy Star Dehumidifier with Pump (Previously classified as 70-pint)

SKU: IVAESDH50WP

User Guide



Thank you for purchasing your Ivation® 50-Pint Energy Star Dehumidifier with Pump. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

This dehumidifier is Energy Star rated for quality assurance (www.energystar.gov).

TABLE OF CONTENTS

- 3 SAFETY PRECAUTIONS**
- 5 PRODUCT OVERVIEW**
- 7 USAGE**
- 10 CARE**
- 12 SPECIFICATIONS**
- 13 TROUBLESHOOTING**
- 16 WARRANTY**
- 17 GET IN TOUCH!**

SAFETY PRECAUTIONS


- Before plugging this device in, make sure that the power cord and wattage/voltage of the outlet supplying power to the unit comply with the recommended wattage/voltage on the rating label.
- Before cleaning, make sure to completely turn off and unplug this appliance.
- Never let any hard or heavy objects press into or sit atop the power cord. This could damage the cord, which will result in electrical shock or a similar safety hazard.
- Never remove the plug from the outlet or attempt to move the dehumidifier by yanking or pulling on the power cord.
- Never use any heating device (space heater, fireplace, heating vent, etc.) near the dehumidifier.
- Never remove the plug from the power supply or handle any other electrical parts of the dehumidifier with wet hands.
- Always make sure the power cable is plugged into a grounded outlet, the plug is undamaged, and the connection is secure before turning on the appliance.
- Never place the dehumidifier under any wet and/or dripping objects.
- When not using the pump feature, leave the plug in the pump hose attachment port to prevent leaking.
- Disconnect the unit from the power supply if you will not be using it for any extended period. The memory function will store any programmed settings and recall them when you resume use.
- Never attempt to repair or disassemble this appliance by yourself for any reason.
- If at any point you notice a device malfunction or abnormal behavior (for example, a burning odor emitting from the unit), immediately disconnect the product from the power supply and contact Ivation® customer service.
- Never dispose of this product with regular household waste. If you intend to dispose of this product, please contact your local waste disposal service for information about how to properly dispose of this product.
- This appliance should not be used by children unless they are closely supervised or have received extensive instruction on how to use this device by an adult responsible for their safety. Young children should always be supervised around this appliance to ensure that they do not play with or climb on it.
- Individuals with disabilities should not attempt to use this device without supervision to avoid risk of injury.

- User maintenance and cleaning should always be conducted with adult supervision. Children should not be allowed to maintain or clean this device.
- Use of an extension cord is not recommended with this appliance.
- Install this appliance in accordance with national wiring regulations.
- If the power cord becomes damaged, it must be replaced by either Ivation®, an authorized serviceperson, or a similarly qualified professional as soon as possible. Do not attempt to repair or replace the power cord on your own.
- The maximum current that can pass through the fuse must not exceed 3.15A. The specific fuse type is T3.15AH250V.

SAFE USE REQUIREMENTS

- The dehumidifier is only intended for indoor residential use. It should not be used for commercial or industrial spaces. This unit may not perform as intended and could present a safety hazard in commercial or industrial spaces.
- Always place the dehumidifier on a smooth, level floor.
- This device will have no effect on adjacent enclosed areas such as closets or pantries if they remain enclosed. If the door to such an area is left open, the dehumidifier may remove humidity from that space as well.
- Make sure to place this appliance in an area where the temperature will not fall outside the specified working range of 41 °F – 90 °F (5 °C – 32 °C) and where the humidity will remain within the specified working range of 30% – 90%. This dehumidifier will not function properly and could present a safety hazard if operated outside of the recommended temperature and humidity range.
- Always make sure to allow at least 18" (45.72 cm) of air space on all sides of this device.
- To improve the efficiency of this appliance, we recommend closing all doors, windows, and other openings to spaces outside the room in which it is installed.
- Keep the air inlet is clean and free from obstructions.
- Never use a dehumidifier in a bathroom.
- Avoid exposure to direct sunlight.
- This dehumidifier has built-in castors on the bottom to aid in its placement. Rolling the device across carpet or over objects could damage the device and cause water to spill out, creating a safety hazard.

PARTS

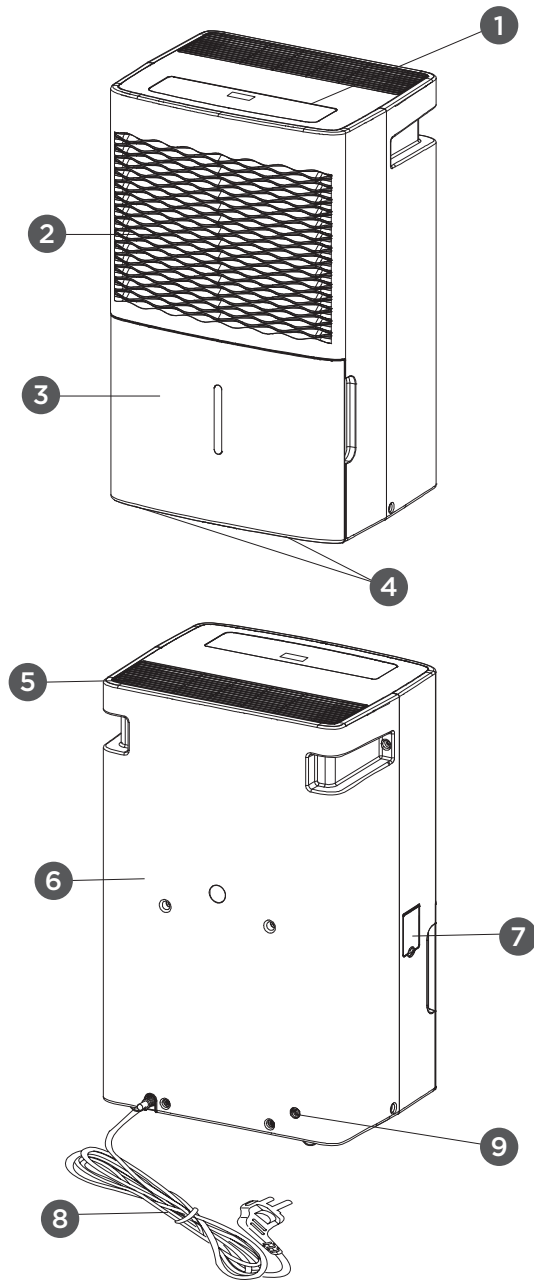


- 1 Control panel
- 2 Air intake vent
- 3 Water reservoir
- 4 Castors
- 5 Air outlet
- 6 Rear case
- 7 Drainage hose attachment cover
- 8 Power plug
- 9 Pump hose attachment

NOTE: Actual product may be different from above illustration.

CONTROL PANEL

The control panel may differ slightly from the illustration below.

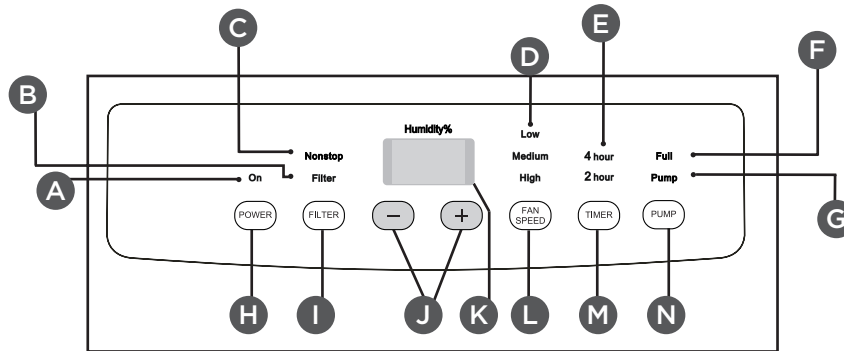

LIGHTS AND DISPLAYS

- A** Power indicator light
- B** Filter indicator light
- C** Nonstop operation indicator light
- D** High, Medium, and Low fan indicator lights
- E** 4 hour or 2 hour delay on/off indicator lights
- F** Full indicator light
indicates bucket needs to be emptied or is not in place in the unit
- G** Pump mode indicator lights

CONTROL BUTTONS

- H** **POWER**
Press to turn the dehumidifier on and off.
- I** **FILTER**
Turn off the CLEAN FILTER indicator LED (automatically turns on after 250 hours of operation to remind you to clean the filter).
- J** **-/+**
Set the humidity level in 5% increments within a range of 35% to 80%. Set the unit for continuous operation by pressing the minus button until the screen reads NS.
NOTE: If Nonstop is selected, the dehumidifier will operate continuously at its maximum setting if attached to a drainage hose or until the bucket is full.
- K** **DISPLAY**
Shows the set % humidity level while setting, then shows the actual room % humidity level ($\pm 5\%$ accuracy).
- L** **FAN SPEED**
Toggles fan speed settings between High, Medium, or Low.
- M** **TIMER**
When operating, press this button to set device to automatically turn off in 2 hours or 4 hours. When off, press this button to automatically turn device on in 2 hours or 4 hours.
- N** **PUMP**
Press and hold this button for three (3) seconds to starting running the unit in pump mode.

ADDITIONAL FUNCTIONS

Bucket Alert

If the water bucket is full, removed, or not locked in place for more than three (3) minutes, you will receive a ten (10) second buzzer alert notifying you to replace or empty the bucket. After this alert, the unit will shut itself off completely. Once you empty and replace the bucket, the unit will resume its normal functions.

Auto Shut Off

When the bucket is full, removed, or not locked correctly in place, or when the humidity in the room becomes 5% lower than the set (or preset) humidity level, the device will automatically stop dehumidifying. The fan will continue to run for three minutes until the Bucket Alert sounds and then shut itself off entirely.

Auto Defrost

When frost builds up on the evaporator coils, the compressor will cycle off and the fan will continue to run until the frost evaporates.



Power Outage

In the case of a power outage or interruption, the unit will automatically restart in the settings last used after the power is restored.

BEFORE FIRST USE

Prior to using your new dehumidifier, please check to make sure the float is properly placed in the drainage bucket.

1. Grab the handles on both sides of the water bucket and pull it straight toward you.
2. Make sure the float in the water bucket is placed correctly as it may have moved in transit. Refer to the diagram for the correct position and move it manually to the correct position if needed.

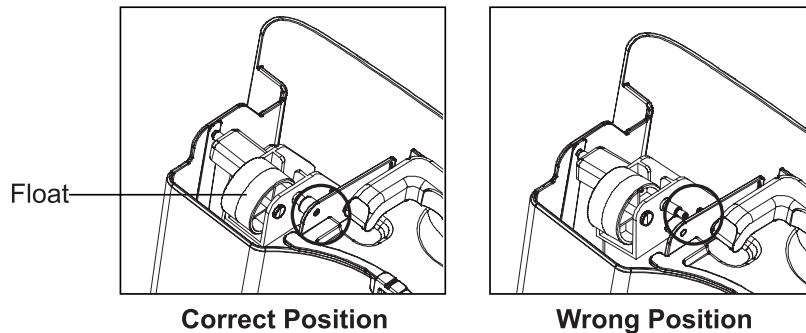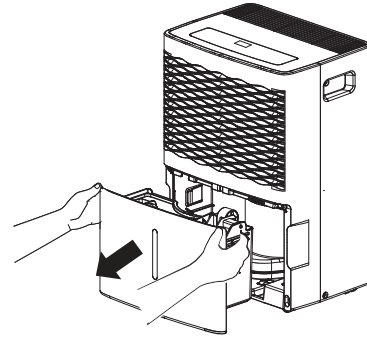

3. Reattach the water bucket to begin use.

IMPORTANT NOTES BEFORE USE

- The water bucket must be properly installed and emptied for the dehumidifier to function.

- Do not remove the bucket while the unit is in operation. If the bucket needs to be emptied, shut off the unit first. Removing the water bucket while the unit is running may cause electrical shock or other safety hazards.
- If you wish to use a hose to continuously drain the device rather than repeatedly emptying the bucket, refer to the “Drain Hose” section under Drainage Options (below).
- All successful button presses on the control panel will be confirmed with an auditory beep.
- When the power cable is connected, the indicator light above the power button will be lit and the dehumidifier will beep to confirm the connection.


DRAINAGE OPTIONS

MANUAL DRAINING

NOTES: Do not remove the bucket when unit is in operation or has just stopped. Otherwise it may cause some water to drip on the floor.

Do not use the hose if using water bucket to collect water. When the hose is connected, water will be drained out through it instead of into the bucket.

1. Hold the handles on both sides of the water bucket and pull it out following the arrow direction. (Attention: Pull out the bucket carefully to prevent water from spilling out from the bucket.)
2. Empty the bucket by grasping the handle on the top of the bucket with one hand and grasping the bottom of bucket with the other hand.
3. Replace bucket in the dehumidifier according to the arrow direction.

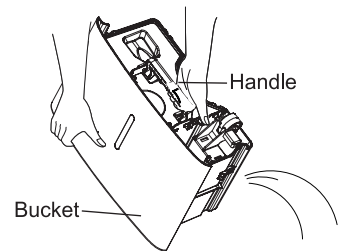


NOTE: Actual product may be different from above graphics, please refer to actual product.

DRAIN HOSE


NOTE: No garden hose is included in the box, so you will need to supply your own. The hose should have a thread with an outer diameter of 1-1/16" (2.7 cm) and a pitch of 11.5 TPI.

1. Remove the bucket from the unit as described in Option 1.
2. Locate a nozzle with threading inside the compartment where the bucket sits.
3. Lift the hatch on the outside of the dehumidifier that allows you to feed the hose through the opening. Then, screw the hose into the threading of

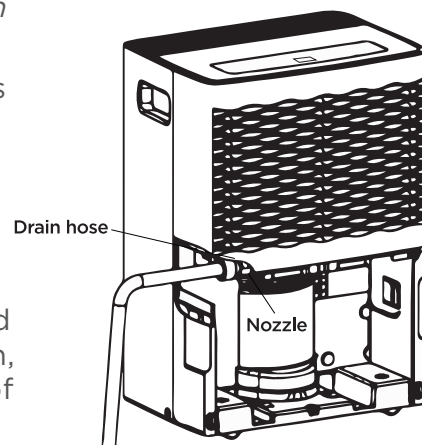

- the nozzle until it is securely fastened.
- Replace the water bucket as normal.
 - With the drainage hose passing through the bucket's drain hole, aim the hose downward. Feed the other end of the hose into a floor drain and cover the hole with a lid so the water will run straight into the drain and not spill.

Please note that the hose should not be pressed, twisted, or run up an incline, or else the water will not drain properly. See diagram below.

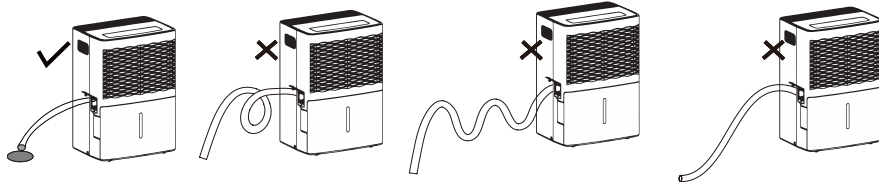


NOTE: When you want to remove the drainage hose, you will need to prepare a receptacle to collect water from the nozzle.

PUMP DRAINING

Note: The unit must be in PUMP mode for the pump to work. The drainage pump will not run continuously but will turn on and off as the float detects water in the bucket. Water will accumulate in the bucket until the bucket is 90% full. At that point, the pump will activate and drain the bucket to 75% full. Water will always remain in the bucket even when pump draining is operating.


Installation

- Push the gray rubber ring in and remove the plug to open the pump hose attachment.
- Insert the included pump hose into the pump hose attachment.
- Run the drain hose to the location where you want water to drain. The pump can push water up to 16 feet (5 meters) horizontally or vertically. Do not exceed this distance to avoid drainage or device malfunctions.

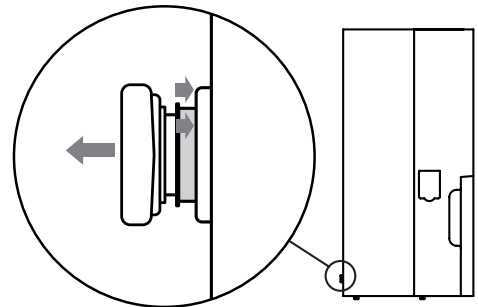

Removal

- Push the gray rubber ring in to open the pump hose attachment.
- While pushing the gray rubber ring in, pull hard to remove the pump hose.
- Once the pump hose is disconnected, replace the plug and ensure the gray rubber ring goes back to its normal position.

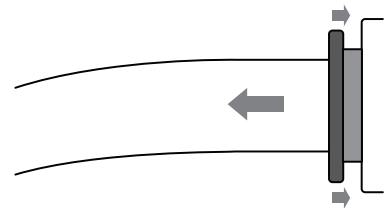

Note: When not using the pump drain option, leave the plug in pump hose attachment port to prevent leaking.

CARE AND MAINTENANCE

WARNINGS:

- Before cleaning, turn off the dehumidifier and disconnect it from the power supply. If you do not do this, you could create the risk of electrical shock or other safety hazards.
- Do not wash the dehumidifier with water or submerge the unit in water at any time. This could cause electrical shock or even a fire.
- Do not use harsh detergents to clean the dehumidifier at any time or else it will strip the paint and damage the unit's appearance.

CARING FOR THE AIR INTAKE VENT AND OUTER CASING

- Use a soft, dry towel to wipe down the outer casing and remove dust. If more cleaning is necessary, use a towel that is damp—NOT wet—with soapy water.
- To clean the air intake vent, you should use a dust catcher or gentle brush.

CARING FOR THE WATER BUCKET

- Every few weeks, you should remove the water bucket from the unit and clean it to prevent the growth of mold, mildew, and bacteria. Use a soft brush to clean the bucket and then rinse it out.
- To clean the bucket, you'll first need to remove the handle. Do this by flipping it up toward the front/top of the bucket so that the pegs holding it in place are lined up with the holes through which they are fitted (see the figure below). Then, pull the bucket plate at the side of the handle in the direction illustrated below so the pegs come free of the holes and you can remove the handle.
- Once the handle is removed, press down the four buckles surrounding the bucket and lift up the drain lid to remove it. Then, you can easily reach inside the bucket to clean it.
- After cleaning the water bucket, replace the drain lid and handle, and then make sure the float is positioned correctly. The side with the foam plastic should be beneath the drain lid. Do not remove the foam plastic on the float.

CARING FOR THE AIR FILTER

- After 250 hours of operation, the dehumidifier will remind you to clean the air filter. If you are using the dehumidifier in a location where dust accumulates more quickly, you will need to clean the air filter more often.

- To remove the air filter, first remove the water bucket. Then, reach inside the opening at the bottom of the front air vent, grasp the bottom plastic edge of the air filter, and pull straight down to remove it.
- Use warm soapy water to clean the air filter, making sure to rinse it and allow it to air-dry before replacing it in the dehumidifier.

WARNINGS:

- Do not attempt to operate the dehumidifier without the filter, or else dust will accumulate on the evaporator and this will affect the unit's performance.
- Do not dry the air filter with fire or an electric hairdryer, otherwise the filter could become misshapen or catch on fire.
- Do not use a dust catcher or brush to clean the air filter, as these can permanently damage the filter.

BEFORE USE (SEASONALLY)

- Check to make sure the air outlet is not blocked.
- Check to make sure the power plug and power socket are in good condition.
- Check to make sure the air filter is clean.
- Check to make sure the drain hose is not damaged.

AFTER USE (SEASONALLY)

- Disconnect power.
- Clean air filter and outer casing.
- Clean the dust and any obstacles from the dehumidifier.
- Empty the water bucket and clean it.

SEASONAL STORAGE INSTRUCTIONS

If you intend to put your dehumidifier in storage for the season, or simply plan on not using it for an extended period, we recommend you take the following steps:

- Make sure the water bucket is emptied and dry and the drainage hose is removed.
- Unplug the dehumidifier and store the power cable safely.
- Clean the unit and wrap it up so that dust will not accumulate in the filters, air vents, etc.

SPECIFICATIONS

Rated voltage: 115 V

Rated frequency: 60 Hz

Power input: 690 W

Current input: 6.2 A

Rated input: 810 W

Rated current: 7.2 A


Set humidity range: 35% - 80%

Rated capacity: 49.88 pints/day (23.6 L/day)

Dimensions: 15" x 24" x 11.2" (38 x 61 x 28.5 cm)

Net weight: 43.7 lbs. (19.8 kg)

ELECTRONIC SCHEMATIC DIAGRAM

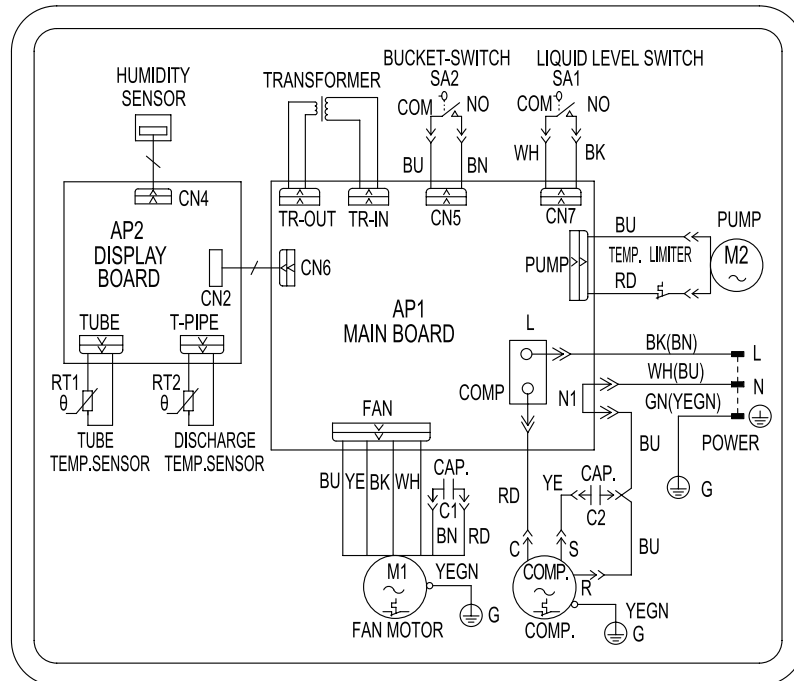

TROUBLESHOOTING

Note: Not all listed issues indicate a device malfunction. This guide will help identify the causes and possible remedies of any major/minor problems. This guide will also address occurrences that are regular parts of the dehumidifying process.

GENERAL TROUBLESHOOTING

Symptom	Possible Causes
Dehumidifier not operating. Controls cannot be set.	<ul style="list-style-type: none"> Unit is operating in an area where the temperature is outside of the operating range of 41 °F – 90 °F (5 °C – 32 °C). Water bucket is full (check for BUCKET FULL light).
Volume level suddenly increases during operation.	<ul style="list-style-type: none"> Compressor has turned back on. Power supply issue. Unit is placed on uneven floor.
Humidity in the space does not drop.	<ul style="list-style-type: none"> Area could be too large for this dehumidifier. Open doors/windows might be reducing efficiency. A device in the room could be producing vapor/humidity/steam.
The dehumidifying effect seems to be minimal or non-existent.	<ul style="list-style-type: none"> Room temperature is too low. Humidity level may be set incorrectly or set too high. If the dehumidifier is operating in a room where the temperature falls between 41 °F – 90 °F (5 °C – 32 °C), it will start to automatically defrost itself. During this time, the compressor will stop working, although the fan will continue operating at the highest fan speed setting. Once it finishes defrosting itself, it will resume normal operation.
Upon first operation, air emitted from the device has a stale/musty odor.	This odor is usually caused by the initial rise in temperature of the heat exchanger (a necessary part of the dehumidifying process). This is common after the device has been in storage.
Unit makes whirring/clanking noises.	This is normal if the device is being operated on a hard or wooden floor.
The dehumidifier makes a whooshing noise.	This is normal. The sound is created by the refrigerant flowing.

DRAINAGE HOSE TROUBLESHOOTING

Symptom	Possible Causes	Probable Solution
When using the hose to drain water, there is still water appearing in the bucket.	Hose is not firmly tightened on the drainage nozzle.	Re-tighten the hose on the drainage nozzle until it is totally secured.
	An obstruction is preventing the hose from draining properly.	Clear the obstruction from the drainage hose.
	The drainage hose is not correctly installed.	Completely remove drainage hose and reinstall it, making sure the hose is securely fastened and unobstructed.

POWER TROUBLESHOOTING

Symptom	Possible Causes	Probable Solution
Power cable is plugged in, but the power indicator light is not illuminated.	There is no power coming from the power supply, or the plug is not fully inserted.	<ul style="list-style-type: none"> • Check if you have lost power in other parts of your home. If so, call your electricity provider and wait for power to be restored. • Check whether the outlet or the circuit has been damaged. If so, try another outlet. • Check whether the power cord is loose or not fully inserted. Unplug it and plug it back in. • Check to make sure the power cord has not been damaged. If it has, disconnect the unit and call customer service or an electrician right away.
	Fuse is blown.	Replace the fuse.
Dehumidifier will not start. Bucket full indicator is lit.	Bucket is improperly placed or removed entirely.	Empty the bucket and replace it correctly.
Unit can run normally but dehumidifying will not start.	Humidity is set too high.	Press the minus button to lower the humidity level if you'd like the air to be drier, or press the CO button so that the CONTINUOUS indicator LED is lit, and the dehumidifier will run continuously.

FUNCTIONAL TROUBLESHOOTING

Symptom	Possible Causes	Probable Solution
Dehumidifier is not performing well.	An obstruction is blocking the air vents.	Make sure no curtains, clutter, or furniture are blocking the airflow of the unit.
	Air filter needs to be cleaned.	Clean the air filter.
	Room is not properly sealed.	Close all doors, windows, and/or other openings to outside the room.
	Room temperature is too low.	The best environment for dehumidifying is a warmer room. If the room is too cold, the dehumidifier will not work as well. Make sure the room temperature is above 41 °F (5 °C).

MALFUNCTION CODES

Display Code	Malfunction Name	Symptoms	Possible Causes
F1	Ambient Temperature Sensor Malfunction	Compressor and fan motor have stopped. The buttons on the control panel do not work.	<ul style="list-style-type: none"> • Ambient temperature sensor is loose or is poorly connected to the display board terminal. • An element of the display board may have been installed upside down and short-circuited. • Ambient temperature sensor is damaged. • Display board is damaged.
F2	Tube Temperature Sensor Malfunction		<ul style="list-style-type: none"> • Temperature sensor on the evaporator is loose or poorly connected to the display board terminal. • An element of the display board may have been installed upside down and short-circuited. • Temperature sensor on the evaporator is damaged. • Display board is damaged.
F5	Discharge Temperature Sensor Malfunction		<ul style="list-style-type: none"> • Temperature sensor on the evaporator is loose or poorly connected to the display board terminal. • An element of the display board may have been installed upside down and short-circuited. • Display board is damaged.
L1	Humidity Sensor Malfunction		<ul style="list-style-type: none"> • Humidity sensor is short-circuited. • Humidity sensor is damaged. • Display board is damaged.
F0	Freon-Lacking Protection	The compressor stops and the fan motor stops after 30 seconds.	<ul style="list-style-type: none"> • Refrigerant is leaking. • Unit is blocked.
H3	High-Temperature Overload Protection		<ul style="list-style-type: none"> • Ambient operating conditions are poor. • Evaporator and condenser are blocked by dirt/dust.
E4	High discharge temperature	The compressor stops and the fan motor stops after 30 seconds.	<ul style="list-style-type: none"> • Device has encountered an abnormal condition (blockage, etc.) • Motor rotation speed is abnormal. • Air intake is obstructed. • Compressor discharge temperature sensor is damaged or poorly connected.

WARRANTY INFORMATION

This Ivation® 50-Pint Energy Star Dehumidifier with Pump (“Product”), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the “Company”) to the original consumer purchaser only, against certain defects in material and workmanship (“Warranty”) as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service. Please contact our customer service for details on obtaining warranty service:

Email: info@myivation.com

Phone: 866-849-3049

Shipping expenses to the Company’s Return Facility are not covered by this warranty and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

EXCLUSIONS AND LIMITATIONS The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser (“Warranty Period”). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company’s property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-Ivation® 50-Pint Energy Star Dehumidifier with Pump product, hardware or software, even if packaged or sold with the Product;
- (b) Damage caused by use with non-Ivation® 50-Pint Energy Star Dehumidifier with Pump product;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third party services;
- (f) A Product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses, and bulbs;
- (h) Cosmetic damage; or
- (i) If any Ivation® 50-Pint Energy Star Dehumidifier with Pump serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product, and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS, AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA, OR RECORDS) CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

GET IN TOUCH!

✉ info@myivation.com

☎ 1-866-849-3049

IVATION is a trademark of C&A IP Holdings, LLC, in the U.S.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Distributed by C&A Marketing, Inc., 114 Tived Lane East Edison, NJ 08837.

Made in China.

© 2020. C&A IP Holdings, LLC. All Rights Reserved.